


STANDARD CONSTRUCTION JOINT DETAILS

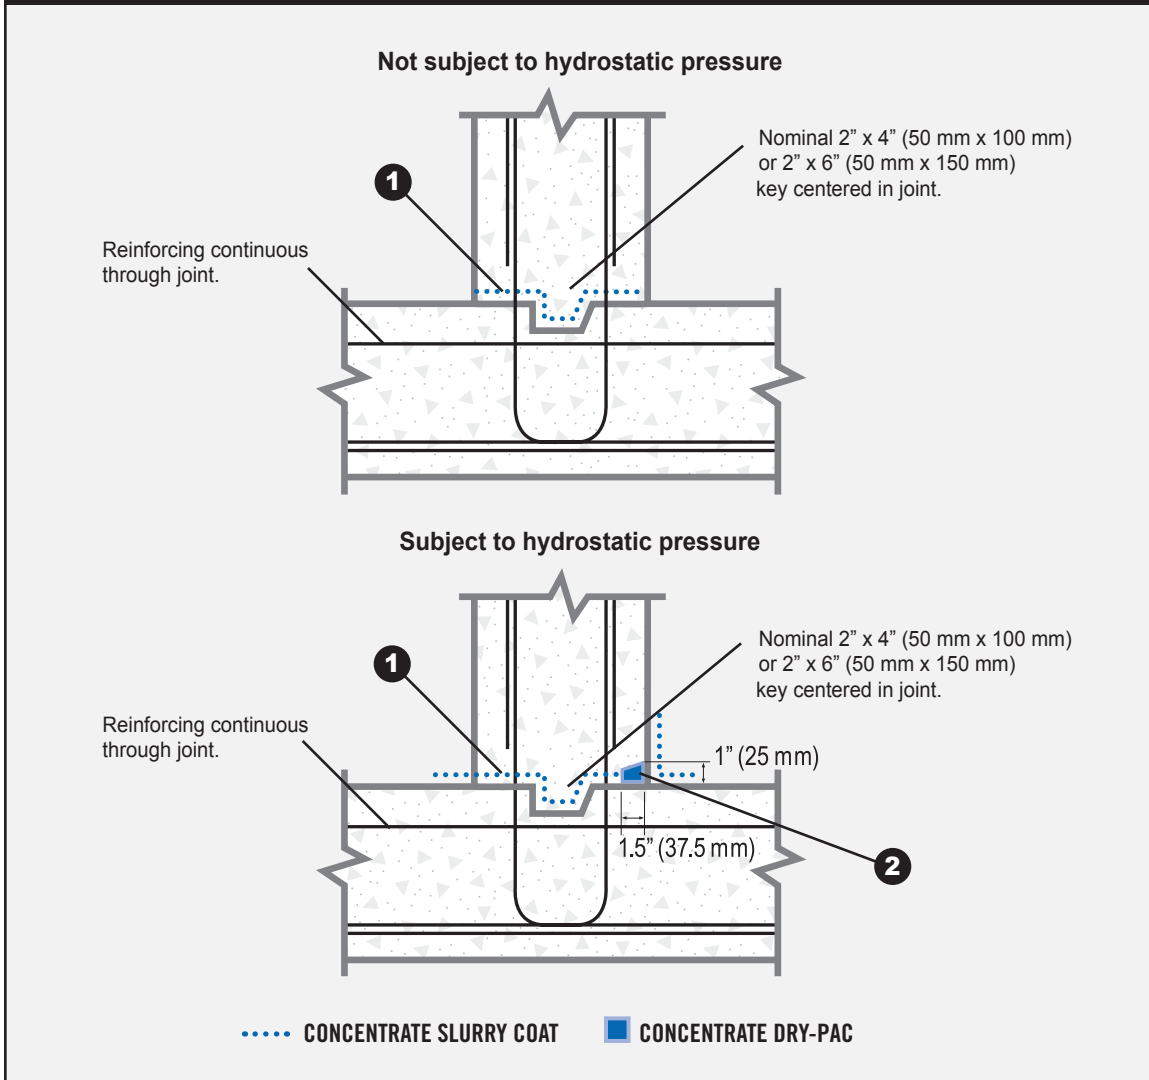

**Walls / Slab Interface**

**Step 1** *Joint Waterproofing:* Clean joint thoroughly. Between pours, apply Xypex Concentrate slurry to joint surfaces at the rate of 2.0 lb./sq. yd. (1.0 kg/m<sup>2</sup>).

**Step 2** *Sealing Strip:* Clean pre-formed groove thoroughly. Apply Xypex Concentrate slurry to groove at the rate of 1.5 lb./sq. yd. (0.8 kg/m<sup>2</sup>). Fill groove with Xypex Concentrate Dry-Pac and pack tightly. Pre-formed groove may be offset to either side of joint.

**Note 1:** Schematic diagram shows Xypex application details only and does not depict standard requirements for waterstops or expansion joint sealants.

**Note 2:** Schematic drawing shows Xypex Coating application. Specifier may consider the alternative use of Xypex Dry Shake (DS-Series) or Xypex Additive (Admix C-Series), where applicable. Refer to Standard Specifications for more information.