


STANDARD CONSTRUCTION JOINT / COLD JOINT DETAILS

Standard Pipe Penetration Detail

2018-11

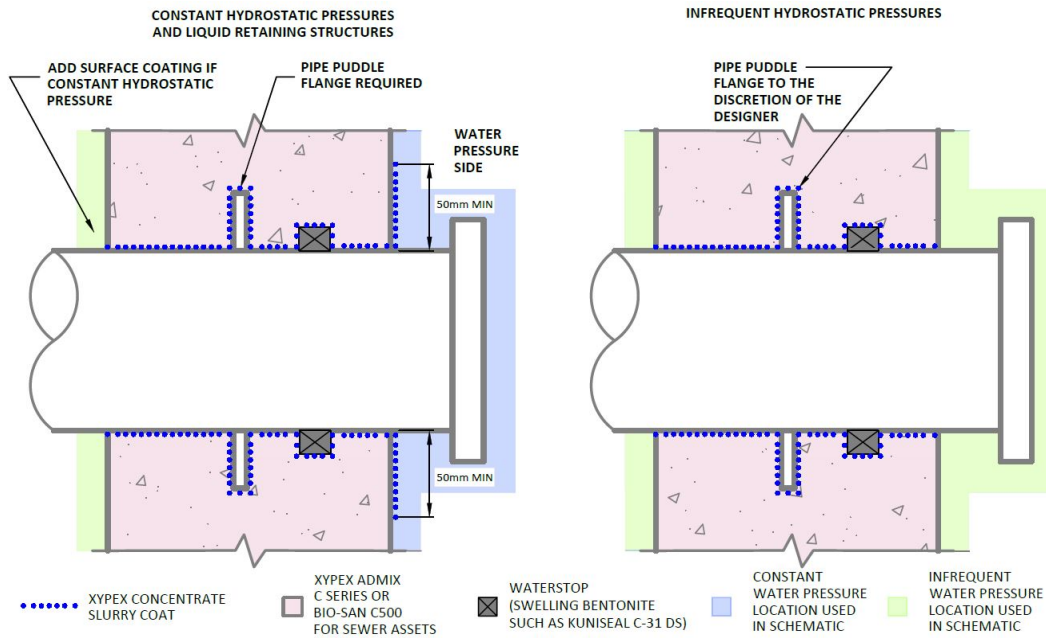

General

This schematic details the products and procedures for the treatment of pipe penetrations in new concrete structures. **This detail is not applicable for movement joints, slip joints or expansion joints.** This detail uses two elements in addition to additives and coatings to waterproof the joints of the structure. The two protection measures used are *Xypex Concentrate* to ensure the joint can self-heal cracks/shrinkage movement up to 0.4mm static width, and *Kuniseal C-31 DS* (*Kuniseal*) as a high swelling moisture barrier/water stop.

This detail must be used in conjunction with the *Xypex* and other product data sheets and method statements.

Note: Schematic diagram shows *Xypex* application and waterstops, inclusion, type and position of waterstops are at the discretion of the designer. Expanding waterstops may be placed on *Xypex* after it has dried or before *Xypex* slurry application. *Xypex* slurry may only be applied over waterstop if approved by waterstop manufacturer.

Note: Puddle flanges may be incorporated into the joint design at the discretion of the designer.

Note: Schematic drawing shows *Xypex* admix application. Specifier may consider the alternative use of *Xypex* dry shake (DS-series) or *Xypex* coatings, where applicable. Refer to *Xypex* standard specifications for more information.

Surface Preparation And Application Of Kuniseal

1. Clean pipe thoroughly and roughen with wire brush or sandpaper. Wet the surface of the pipe with a wet sponge or the like. Wet *Kuniseal C-31 DS* prior to installation. Ensure that sufficient moisture is present to activate the self-adhesive sheath and re-wet with fine mist spray as required during application. **DO NOT** peel off the covering hydro-bag, *Kuniseal* is covered with an adhesive sheath/hydro-bag.
2. Install *Kuniseal* around the pipe penetration, preferably central to the joint. Ensure a minimum clear concrete cover of 30mm will be achieved. Press *Kuniseal* firmly in place and down onto the pipe surface to promote adhesion.
3. Ensure *Kuniseal* will align with other joints and applications of *Kuniseal*.
4. Ensure ends of *Kuniseal* fully abut and are sealed by firmly pressing together.
5. Temporary support *Kuniseal* in place until adhesive has affixed.

Mixing For Xypex Concentrate Slurry

1. Mix *Xypex Concentrate* powder with clean water to a creamy consistency in the following proportions:

STANDARD CONSTRUCTION JOINT / COLD JOINT DETAILS

Standard Pipe Penetration Detail

2018-11

Brush Single Coat Application

0.65 - 0.8 kg/m² Mix 5 parts powder to 2 parts water

Spray Single Coat Application

0.65 - 0.8 kg/m² Mix 5 parts powder to 3 parts water

Do not mix more dry powder than can be applied in 20 minutes. Allow mixture to stand and start to harden, then re-agitate. If the mix starts to harden, stir briefly to maintain fluid. DO NOT add extra water.

Coating Application

1. Clean pipe thoroughly and roughen with wire brush or sandpaper. Spray pipe with fine mist spray of water. If the surface dries out after initial water application, it must be re-wetted using a fine mist spray of clean water.
2. Apply *Xypex Concentrate* slurry coat over the pipe surface and Kuniseal using a semi-stiff nylon bristle brush or specialised spray equipment. Slurry coating must be uniformly applied with an approximate thickness of 1.25 mm.
3. If applicable, cure *Xypex Concentrate* coating as soon as the coating has set to the point where it will not be damaged by a fine mist spray of clean water (about 2-4 hours after application depending on the weather conditions). Cure the applied coating with a fine mist spray of clean water at least 3 times a day for 2-3 days if required. Alternatively conduct placement of concrete prior to coat drying.
4. Where internal/surface coating is indicated refer to *Xypex Concentrate* Coating Method Statement and data sheet for application procedures.
4. The information presented is in addition to Xypex product data sheets and is not meant to replace these or any other installation guides but rather is meant to give a general description of the installation practices and procedures surrounding the use of Xypex products for waterproofing and protecting concrete and while normally provide an acceptable final appearance they are not meant as aesthetic finishes. Refer to Safety Data Sheets for safety information, applicators need to use all products and equipment in line with manufacturers and industry requirements.
5. The use of Xypex products promote self-healing of static cracks up to 0.4mm width. Pending the design of the structure, designed allowable crack width, concrete selection, concrete placement, curing procedures and quality of workmanship undertaken. Cracking may occur or present post construction. The client/contractor or the like, should be aware that cracking may occur post construction which is due to the factors as indicated above. These factors are not in the control of Xypex. Post construction cracking should be monitored and repairs conducted, where required, in accordance with Xypex methodologies.
6. Kuniseal must not be installed in standing water or allowed to absorb water and swell. Kuniseal should not be left exposed for prolonged period prior to concrete placement above.
7. For severe chemical or aggressive environments consult Xypex Australia representatives for compatibility information and approval. Kuniseal bentonite waterstop should be substituted for hydrophilic rubber/acrylic waterstop or similar when subject to severe chemical attack. All products are to be selected to the manufacturers conditions and used in accordance with manufacturers documentation.

Note:

1. The *Xypex Concentrate* must not be applied under rainy conditions or when ambient temperature is below 4°C. Avoid application of the Xypex coating in hot and windy conditions as the coating may dry out prematurely. Recommended to not install in temperatures > 30°C.
2. Where formwork prevents the application of *Xypex Concentrate* by brush or spray, moisten the concrete surface. Mix *Xypex Concentrate*, 6 parts powder to 1 part clean water, as a dry pac, mix for 10 to 15 seconds. Lumps should be present in the mixture. Refer to data sheet, and sprinkle from top of formwork onto the concrete approximately 1.5 to 2mm thickness.
3. Repairs to cracks, honeycombing, air pockets, and defects are to be repaired as per Xypex Methodologies, refer separate method statements.

Although every care is taken by XYPEX to ensure that the material contained in this publication is accurate, XYPEX does not guarantee the suitability, completeness or accuracy of any of the material in this publication. Consequently, XYPEX can accept no responsibility for unsuitable, incomplete or inaccurate material and application, which may be contained here. The user shall determine the suitability of the product for its intended use.