


**STANDARD METAL PIPE DETAIL**

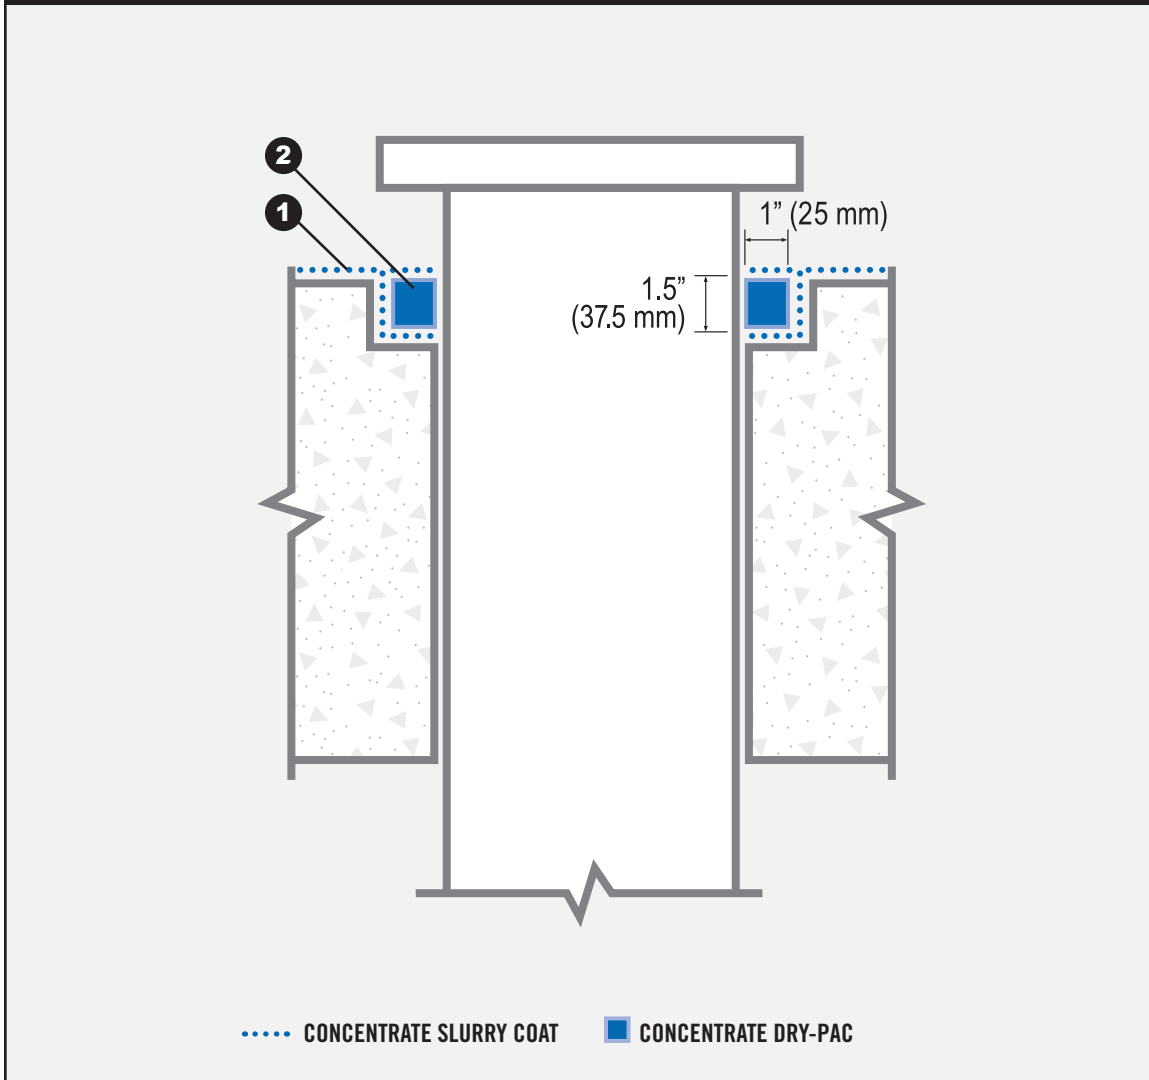

**Step 1** Apply Xypex Concentrate slurry to the groove at the rate of 1.5 lb./sq. yd. (0.8 kg/m<sup>2</sup>).

**Step 2** Fill groove to surface with Xypex Concentrate in Dry-Pac form and pack tightly. Brush Dry-Pac liberally with water and apply a Xypex Concentrate slurry over the Dry-Pac at the rate of 1.5 lb./sq. yd. (0.8 kg/m<sup>2</sup>).

**Note 1:** Schematic diagram shows Xypex application details only and does not depict standard requirements for waterstops or expansion joint sealants.

**Note 2:** Schematic drawing shows Xypex Coating application. Specifier may consider the alternative use of Xypex Dry Shake (DS-Series) or Xypex Additive (Admix C-Series), where applicable. Refer to Standard Specifications for more information.